

ADJUSTABLE FLOOR DRAIN



Approval Date

Customer Approval


Job Location

Job Name

Wade Division / Tyler Pipe Assumes No Responsibility For Superseded or Voided Data
 are Subject to Manufacturers Tolerance and Change Without Notice.

1100-DT

CAST IRON ADJUSTABLE FLOOR DRAIN WITH SATIN FINISH NICKEL BRONZE STRAINER ASSEMBLY, WIDE TROWELING FLANGE, VANDAL PROOF SECURED GRATE, CLAMPING COLLAR AND BOTTOM OUTLET. INSTALLATION INSTRUCTIONS

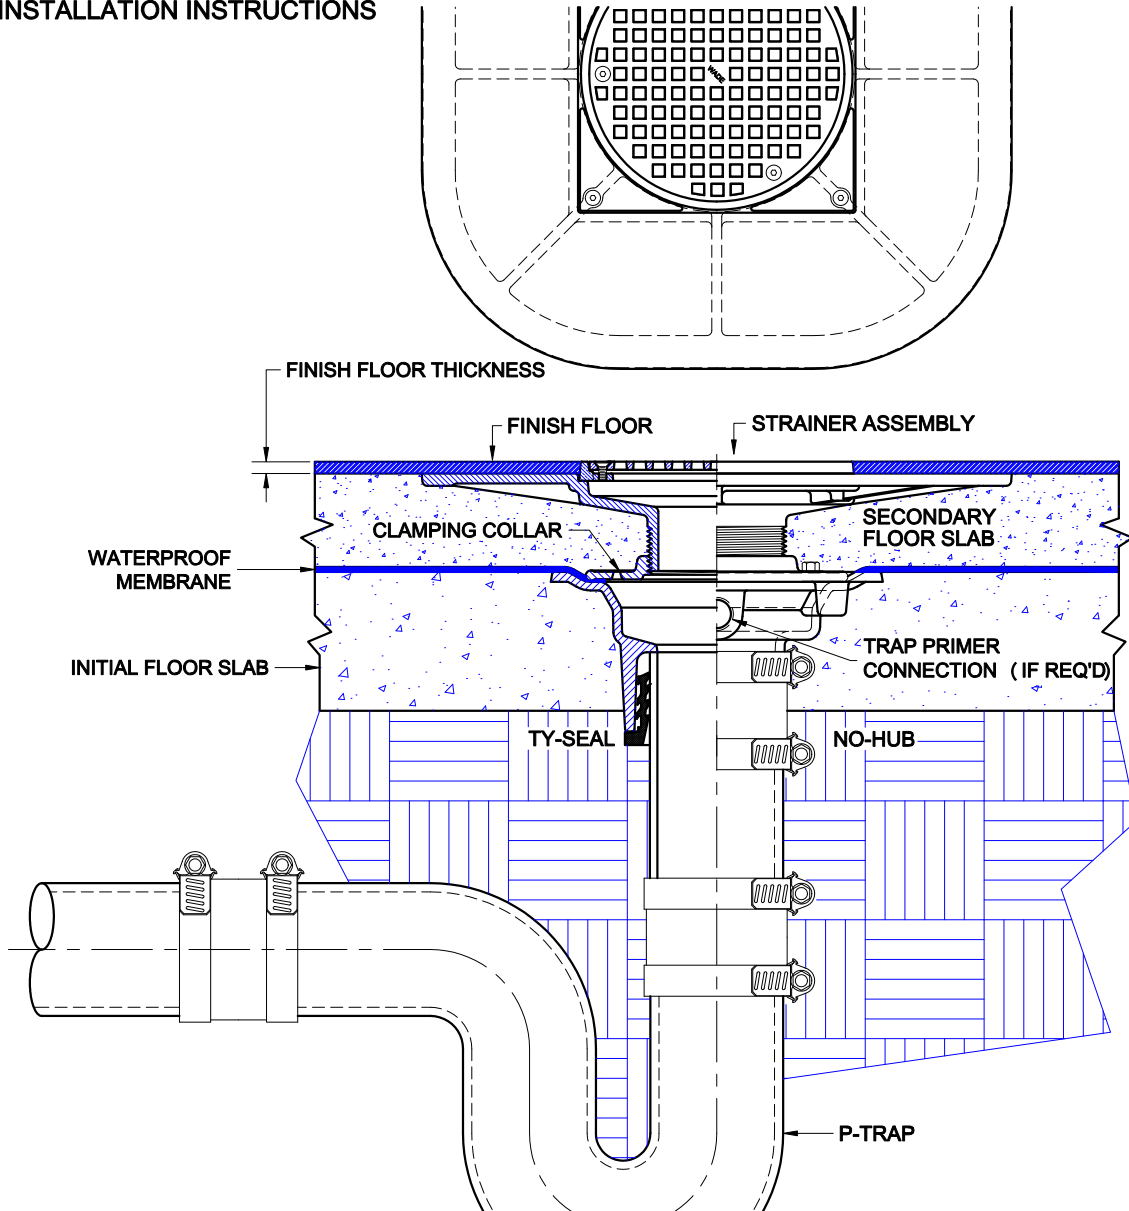

The Wade 1100-DT adjustable floor drain is for applications utilizing poured water proof floor coverings such as Dex-O-Tex. The drain piping is first run to an elevation below the expected finish floor level. The piping must include a p-trap and the drain body is secured to the pipe with with any of four connections; Threaded, No-Hub, Inside Caulk, or Push-On Ty-Seal. The type of connection must be specified upon ordering any Wade Drain. If the Ty-Seal connection is specified, apply Tyler Ty-Seal lubricant to the inside surfaces of the gasket and then firmly push the drain body onto the pipe until it contacts the pipe stop in the body. No-Hub outlets should be installed with Tyler or Anaco/Husky couplings and secured with a torque wrench to the manufacturers recommendations. Threaded or Inside Caulk connections should follow standard industry practices. Once the body is connected to the pipe, the initial concrete sub-floor is poured to an elevation level with the top flange of the drain body. The waterproofing membrane is applied to the the sub-floor surface and over the drain body. The clamping collar is then placed onto the drain and secured - the membrane must be clamped between the body and the clamping collar. The adjustable strainer assembly threads into the clamping collar and is adjusted to the desired dimension. The second pour should be flush with the top surface of the wide flange. For finish floor installation, the waterproof material is applied to the slab and extends over the wide flange of the strainer shank, butting up to the raised lip on the strainer. Care must be taken to protect the top during installation. Use either cardboard, tape or other protective materials.